



Engine, gearbox & axle stop leak

1 ▶ 6L

12 x 300 ml

PN2023

USE

AUTOPLUS Engine, Gearbox and Axle Stop Leak stops leaks in the engine, the gearbox and the axle. It restores the original properties of rubber, synthetic or natural crankcase gaskets. It prevents and eliminates engine, gearbox and axle leaks.

INSTRUCTIONS FOR USE

Add the contents of can into the oil crankcase or gearbox oil.

PROPERTIES

Engine, Gearbox and Axle Stop Leak:

- Softens hardened and shrunken O-rings and gaskets.
- Stops and prevents leaks from internal and external gaskets.
- Stop leaks in engine, gearbox and axle.

CAUTION

When used in the gearbox or in the axle, do not exceed 10% of the oil capacity.



Additives & Lubricants SA

24, Chemin du Pré-Moineau
1253 Vandoeuvres - Suisse
Tél.: +41 (0) 22 525 45 30
info@autoplus-additives.com
www.autoplus-additives.com